

Programming Steps for Casio 140CR

10% Markup

INITIAL SET UP

Put the **PGM** key in the Cash Register and turn to the key to **PGM** mode.

Plug in Cash Register into wall socket

Open the printer lid and insert batteries under the paper roll

(3 AA Batteries are not supplied with Cash Register)

Feed the paper into the printer and close the lid

When the display shows a blinking "0" enter the Day - Month & year

(ie: 041215)

After the above step it will go to the Time mode

Enter Time in 24 hr system (ie: 1:00 pm= 1300)

PROGRAMMING THE PRICES

While in the **PGM** mode

Press **1**, then the **PLU** Button, then **55** and press the **CA / AMT TEND** Button
then press **2**, then the **PLU** Button, then **110** and press the **CA / AMT TEND** Button
then press **3**, then the **PLU** Button, then **165** and press the **CA / AMT TEND** Button
then press **4**, then the **PLU** Button, then **225** and press the **CA / AMT TEND** Button
then press **5**, then the **PLU** Button, then **335** and press the **CA / AMT TEND** Button
then press **6**, then the **PLU** Button, then **450** and press the **CA / AMT TEND** Button
then press **7**, then the **PLU** Button, then **550** and press the **CA / AMT TEND** Button
then press **8**, then the **PLU** Button, then **675** and press the **CA / AMT TEND** Button
then press **9**, then the **PLU** Button, then **775** and press the **CA / AMT TEND** Button
then press **10**, then the **PLU** Button, then **900** and press the **CA / AMT TEND** Button
then press **11**, then the **PLU** Button, then **1000** and press the **CA / AMT TEND** Button
then press **12**, then the **PLU** Button, then **1100** and press the **CA / AMT TEND** Button
then press **13**, then the **PLU** Button, then **1350** and press the **CA / AMT TEND** Button
then press **14**, then the **PLU** Button, then **1400** and press the **CA / AMT TEND** Button
then press **15**, then the **PLU** Button, then **1675** and press the **CA / AMT TEND** Button
then press **16**, then the **PLU** Button, then **30** and press the **CA / AMT TEND** Button

Now press the **SUB TOTAL** Button and turn the switch back to REG

TO RING UP A SALE

When ringing up sales use the Cash Register key marked **OP**

Turn key to **REG**

Type in the **Price Code Number** (1 to 16) and press the **PLU** button - this will ring up the price
when all items have been ring up hit **SUB TOTAL** Button

enter the cash received (*do not input a decimal point*) and press the **CA/AMT TEND** BUTTON

At the end of the day use the Cash Register key marked **PMG** and turn it to **X**

Press **CA/AMT TEND** Button to see your sales to date.